
2" Elima-Matic Bolted Aluminum – ATEX


with Metallic Center Section

**E2** 

**E2 Metallic Pumps** 

Aluminum

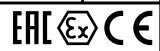

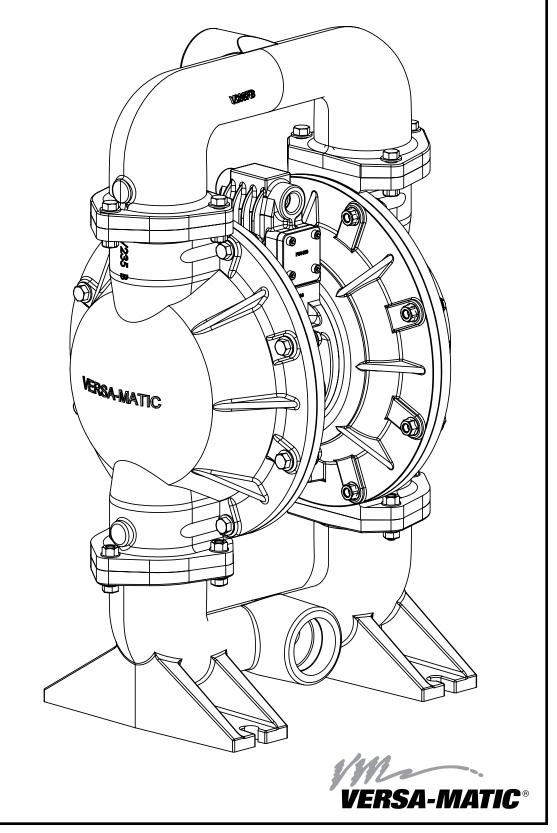

# **Safety Information**

## **A** IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

## **A** CAUTION



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.



#### **WARNING**

Pump not designed, tested or certified to be powered by compressed natural gas. Powering the pump with natural gas will void the warranty.

## WARNING



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.




This pump is pressurized internally with air pressure during operation. Make certain that all fasteners are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

# **Grounding ATEX Pumps**

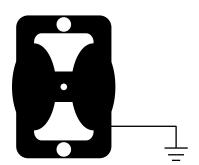

ATEX compliant pumps are suitable for use in explosive atmospheres when the equipment is properly grounded in accordance with local electrical codes. Pumps equipped with electrically conductive diaphragms are suitable for the transfer of conductive or non-conductive fluids of any explosion group. When operating pumps equipped with non-conductive diaphragms that exceed the maximum permissible projected area, as defined in EN 13463-1: 2009 section 6.7.5 table 9, the following protection methods must be applied:

- · Equipment is always used to transfer electrically conductive fluids or
- · Explosive environment is prevented from entering the internal portions of the pump, i.e. dry running

For further guidance on ATEX applications, please consult the factory.



# **Table of Contents**

SECTION 1	I: PUMP	SPECIFICATIONS1
	. Naman	مامار

- Nomenclature
- Performance
- Materials
- Dimensional Drawings

## **SECTION 2: INSTALLATION & OPERATION.....6**

- Principle of Pump Operation
- Typical Installation Guide
- Troubleshooting

## SECTION 3: EXPLODED VIEW.....9


- Composite Drawings
- Parts List
- Materials Code

## **SECTION 4: WARRANTY & CERTIFICATES ....13**

- Warranty
- CE Declaration of Conformity Machinery
- ATEX Declaration of Conformity

# **Explanation of Pump Nomenclature**

Your Serial #: (fill in from pump nameplate)

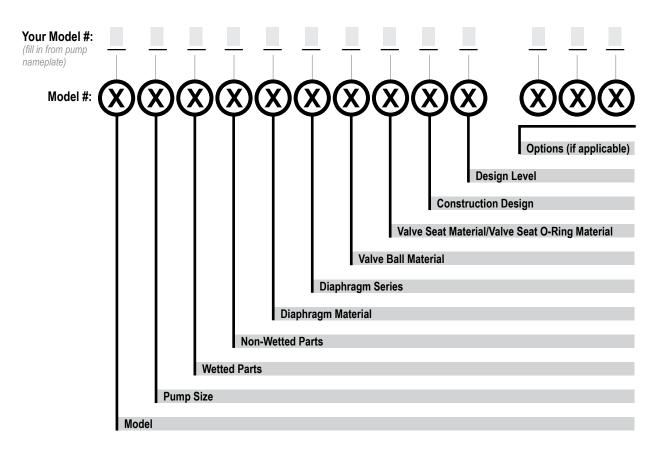

Model	Pump Size	Wetted Parts	Non-Wetted Parts	Diaphragm Material
E Elima-Matic	<b>6</b> 1/4"	<b>A</b> Aluminum	<b>A</b> Aluminum	1 Neoprene
<b>U</b> Ultra-Matic	<b>8</b> 3/8"	C Cast Iron	S Stainless Steel	2 Nitrile (Nitrile)
<b>V</b> V-Series	<b>5</b> 1/2"	S Stainless Steel	P Polypropylene	3 FKM (Fluorocarbon)
	<b>7</b> 3/4"	<b>H</b> Alloy C	G Groundable Acetal	4 EPDM
	<b>1</b> 1"	P Polypropylene	Z PTFE-coated Aluminum	<b>5</b> PTFE
	<b>4</b> 1-1/4" or 1-1/2"	<b>K</b> Kynar	J Nickel-plated Aluminum	6 Santoprene XL
	<b>2</b> 2"	<b>G</b> Groundable Acetal	C Cast Iron	7 Hytrel
	<b>3</b> 3"	B Aluminum (screen mount)	<b>Q</b> Epoxy-Coated Aluminum	Y FDA Santoprene

Diaphragm Series
<b>R</b> Rugged
<b>D</b> Dome
X Thermo-Matic
T Tef-Matic (2-piece)
B Versa-Tuff (1-piece)
F FUSION (one-piece
integrated plate)

1 Neoprene
2 Nitrile
3 (FKM) Fluorocarbor
4 EPDM
5 PTFE
6 Santoprene XL
7 Hytrel
8 Polyurethane
A Acetal
S Stainless Steel
Y FDA Santoprene

1 Neoprene
2 Nitrile
3 (FKM) Fluorocarbon
4 EPDM
5 PTFE
6 Santoprene XL
7 Hytrel
8 Polyurethane
A Aluminum w/ PTFE (

Valve Ball Material Valve Seat/Valve Seat O-Ring Material

7 Hytrel
8 Polyurethane
A Aluminum w/ PTFE O-Rings
S Stainless Steel w/ PTFE O-Rings
C Carbon Steel w/ PTFE O-Rings
H Alloy C w/ PTFE O-Rings
T PTFE Encapsulated Silicone O-Rings
Y FDA Santoprene

Miscellaneous Options
B BSP Tapered Thread
CP Center Port
ATEX ATEX Compliant
FP Food Processing
SP Sanitary Pump
HP High Pressure
OE Original Elima-Matic
F Flap Valve

HD Horizontal Discharge 3A 3-A Certified UL UL Listed OB Oil Bottle



**Construction Design** 

9 Bolted

C

0 Clamped

**Design Level** 

<sup>\*</sup>More than one option may be specified for a particular pump model.

# **Materials**

Material Profile:		ating
	Tempe	ratures:
CAUTION! Operating temperature limitations are as follows:	Max.	Min.
Conductive Acetal: Tough, impact resistant, ductile. Good abrasion resistance and low friction surface. Generally inert, with good chemical resistance except for strong acids and oxidizing agents.	190°F 88°C	-20°F -29°C
<b>EPDM:</b> Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and alcohols.	280°F 138°C	-40°F -40°C
<b>FKM:</b> (Fluorocarbon) Shows good resistance to a wide range of oils and sovents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F) will attack FKM.	350°F 177°C	-40°F -40°C
Hytrel®: Good on acids, bases, amines and glycols at room temperatures only.	220°F 104°C	-20°F -29°C
Neoprene: All purpose. Resistance to vegetable oils. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic hydrocarbons.	200°F 93°C	-10°F -23°C
<b>Nitrile:</b> General purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated hydrocarbons and nitro hydrocarbons.	190°F 88°C	-10°F -23°C
<b>Nylon:</b> 6/6 High strength and toughness over a wide temperature range. Moderate to good resistance to fuels, oils and chemicals.	180°F 82°C	32°F 0°C

<b>Polypropylene:</b> A thermoplastic polymer. Moderate tensile and flex strength. Resists stong acids and alkali. Attacked by chlorine, fuming nitric acid and other strong oxidizing agents.	180°F 82°C	32°F 0°C
<b>PVDF:</b> (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance.	250°F 121°C	0°F -18°C
Santoprene®: Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance.	275°F 135°C	-40°F -40°C
<b>UHMW PE:</b> A thermoplastic that is highly resistant to a broad range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance.	180°F 82°C	-35°F -37°C
<b>Urethane:</b> Shows good resistance to abrasives. Has poor resistance to most solvents and oils.	150°F 66°C	32°F 0°C
Virgin PTFE: (PFA/TFE) Chemically inert, virtually impervious. Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures.	220°F 104°C	-35°F -37°C

Maximum and Minimum Temperatures are the limits for which these materials can be operated. Temperatures coupled with pressure affect the longevity of diaphragm pump components. Maximum life should not be expected at the extreme limits of the temperature ranges.

## Metals:

Alloy C: Equal to ASTM494 CW-12M-1 specification for nickel and nickel alloy.

**Stainless Steel:** Equal to or exceeding ASTM specification A743 CF-8M for corrosion resistant iron chromium, iron chromium nickel and nickel based alloy castings for general applications. Commonly referred to as 316 Stainless Steel in the pump industry.


For specific applications, always consult the Chemical Resistance Chart.



# **Performance**

# E2 - 2" Bolted Aluminum Pump – Metallic Center ELASTOMERIC AND TPE FITTED - RUGGED


Flow Rate
Adjustable to 0-163 gpm (617 lpm)
Port Size
Suction 2" NPT
Discharge 2" NPT
<b>Air Inlet</b>
Air Exhaust 1" NPT
Suction Lift
Dry
Wet32' (9.8 m)
Max Solid Size (Diameter)
Max Noise Level
Shipping Weights
Aluminum

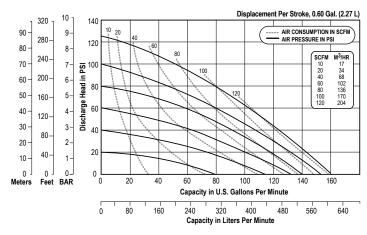

NOTE: Performance based on the following: elastomeric fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.


# E2 - 2" Bolted Aluminum Pump – Metallic Center ELASTOMERIC AND TPE FITTED - DOMED

Flow Rate Adjustable to 0-154 gpm (583 lpm)
Port Size
Suction 2" NPTF
Discharge
<b>Air Inlet</b>
Air Exhaust
Suction Lift
Dry
Wet
Max Solid Size (Diameter)
Max Noise Level
Shipping Weights
Aluminum

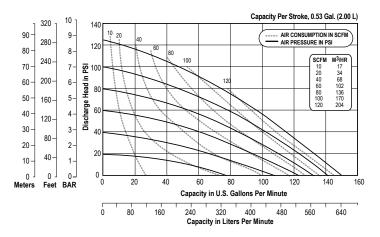

NOTE: Performance based on the following: elastomeric fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

# E2 - 2" Bolted Aluminum Pump – Metallic Center PTFE FITTED

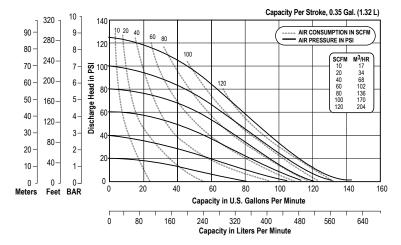


NOTE: Performance based on the following: PTFE fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.





# **Dimensional Drawings**

# **E2 Aluminum Bolted**Dimensionally Interchangeable with Versa-Matic Clamped Pumps

Dimensions in inches (mm dimensions in brackets)
The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.

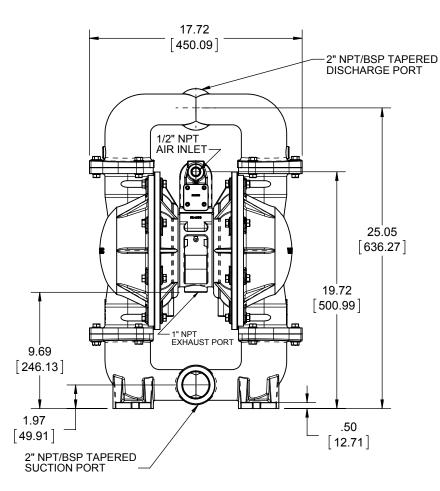

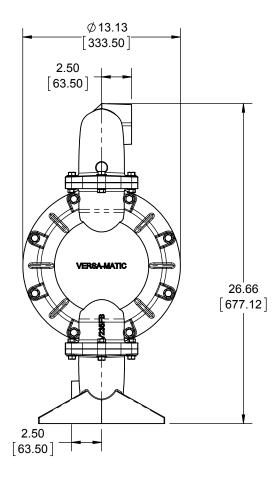

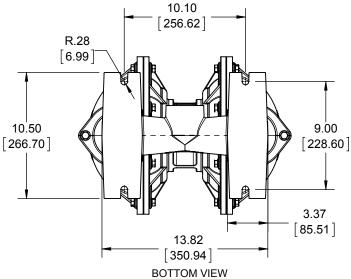




# **Dimensional Drawings**


## **E2 Aluminum Bolted**


## **Dimensionally Interchangeable with Wilden Clamped Pumps**

Dimensions in inches (mm dimensions in brackets)

The dimensions on this drawing are for reference only. A certified drawing can be requested if physical dimensions are needed.

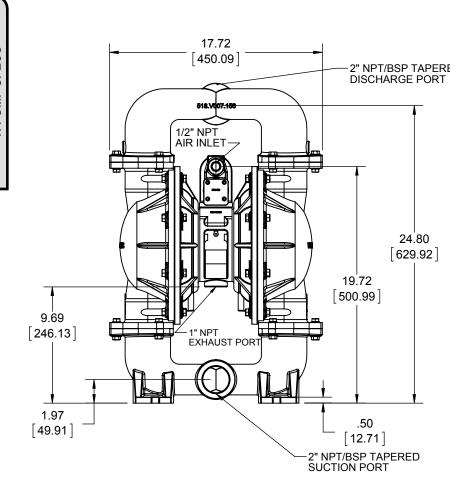


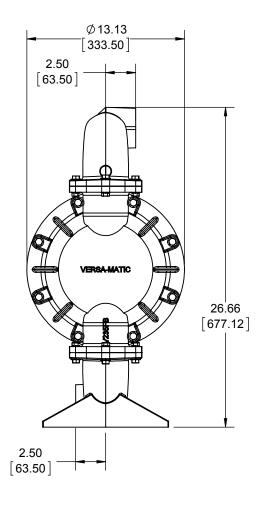

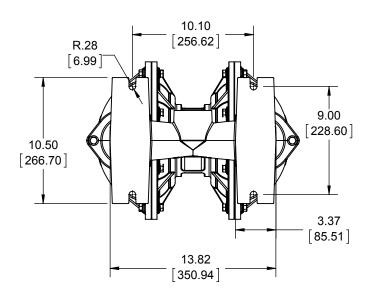



# **Principle of Pump Operation**

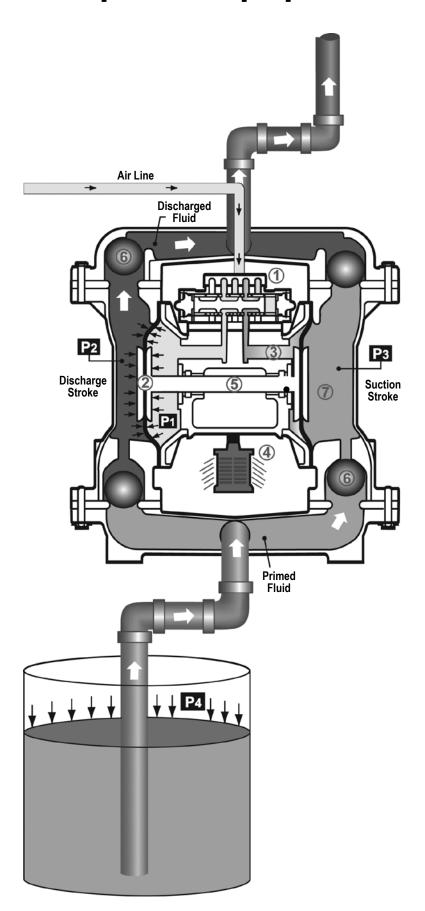

Air-Operated Double Diaphragm (AODD) pumps are powered by compressed air or nitrogen.


The main directional (air) control valve ① distributes compressed air to an air chamber, exerting uniform pressure over the inner surface of the diaphragm ②. At the same time, the exhausting air ③ from behind the opposite diaphragm is directed through the air valve assembly(s) to an exhaust port ④.

As inner chamber pressure **(P1)** exceeds liquid chamber pressure **(P2)**, the rod ⑤ connected diaphragms shift together creating discharge on one side and suction on the opposite side. The discharged and primed liquid's directions are controlled by the check valves (ball or flap)⑥ orientation.

The pump primes as a result of the suction stroke. The suction stroke lowers the chamber pressure **(P3)** increasing the chamber volume. This results in a pressure differential necessary for atmospheric pressure **(P4)** to push the fluid through the suction piping and across the suction side check valve and into the outer fluid chamber  $\mathfrak{T}$ .

Suction (side) stroking also initiates the reciprocating (shifting, stroking or cycling) action of the pump. The suction diaphragm's movement is mechanically pulled through its stroke. The diaphragm's inner plate makes contact with an actuator plunger aligned to shift the pilot signaling valve. Once actuated, the pilot valve sends a pressure signal to the opposite end of the main directional air valve, redirecting the compressed air to the opposite inner chamber.

#### SUBMERGED ILLUSTRATION

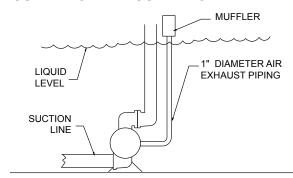

Pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills.



# **Recommended Installation Guide**

#### **Available Accessories:** 1. Surge Suppressor Unregulated Air 1 Supply to Surge 2. Filter/Regulator Surge Suppressor Suppressor 3. Air Dryer Pressure Gauge Shut-Off Valve Pipe Connection Note: Surge Suppressor and (Style Optional) Piping must be supported after Flexible Connector Discharge the flexible connection. Check Valve Shut-Off Drain Por Valve Muffler (Optional Piped Exhaust) Air Inlet Flexible Connector 3 Vacuum Gauge Filter Regulator Air Dryer Suction **CAUTION** Shut-Off Valve The air exhaust should be piped to an area Drain Port for safe disposition of the product being pumped, in the event of a diaphragm failure.

## Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

## Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

## Air Valve Lubrication

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is designed, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.

#### **Air Line Moisture**

Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.

## **Air Inlet And Priming**

To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.




# **Troubleshooting Guide**

Symptom:	Potential Cause(s):	Recommendation(s):
Pump Cycles Once	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Air valve or intermediate gaskets installed incorrectly.	Install gaskets with holes properly aligned.
	Bent or missing actuator plunger.	Remove pilot valve and inspect actuator plungers.
Pump Will Not Operate	Pump is over lubricated.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
/ Cycle	Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. cfm required).
•	Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.
	Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.
Pump Cycles and Will	Cavitation on suction side.	Check suction condition (move pump closer to product).
Not Prime or No Flow	Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.
	Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.
	Valve ball(s)/seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Pump Cycles Running	Over lubrication.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
Sluggish/Stalling,	Icing.	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.
Flow Unsatisfactory	Clogged manifolds.	Clean manifolds to allow proper air flow
Tiow offsatisfactory	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Cavitation on suction side.	Check suction (move pump closer to product).
	Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.
	Undersized suction line.	Meet or exceed pump connections.
	Restrictive or undersized air line.	Install a larger air line and connection.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous.
Product Leaking	Diaphragm failure, or diaphragm plates loose.	Replace diaphragms, check for damage and ensure diaphragm plates are tight.
Through Exhaust	Diaphragm stretched around center hole or bolt holes.	Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
Premature Diaphragm	Cavitation.	Enlarge pipe diameter on suction side of pump.
Failure	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.
	Misapplication (chemical/physical incompatibility).	Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
	Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.
Unbalanced Cycling	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Undersized suction line.	Meet or exceed pump connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs.

For additional troubleshooting tips contact After Sales Support at service.warrenrupp@idexcorp.com or 419-524-8388



# **Composite Repair Parts Drawing - Elastomeric and TPE Fitted**

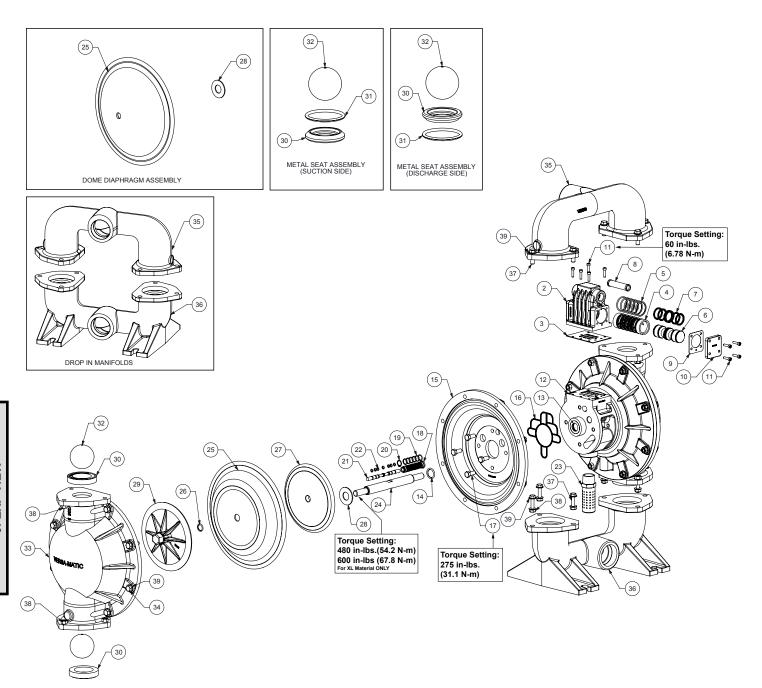




# **Composite Repair Parts List - Elastomeric and TPE Fitted**

Item #	Qty.	Description	Air Valve Assembly	Part N	lumber	
item#	Qty.	Air Side Repair Kit (Includes Items			027.000	
1	1 1	3,5,7,9,14,16,18-22)  Valve Body Assembly (includes items 2-11)			002.156	
2	1	Valve Body Assembly (includes items 2-11)			001.156	
3	1	Valve Body Gasket		P24	-202	
4	1	Valve Sleeve		755.V	006.148	
<u>5</u>	6	O-ring Valve Spool Assembly (Includes items 7)		560.2 775.\/	06.360 001.000	
7	6	Glyde Ring Assembly			-204F	
8	1	Air Valve Screen			-210	
9	2	End Cap Gasket			-205	
10 11	13	End Cap Mounting Screws (8 included on item 1)			-300 001	
		C	enter Section Assemb	ly		
12	Qty.	Description Center Block Assembly (Includes item 13 & 14)		Part N	lumber DDC ASY	
13	2	Bearing sleeve			-403	
14	2	Main Shaft O-Ring		P24	-403	
15	2	Air Chamber		196.V	004.156	
16 17	2	Air Chamber Gasket		P79	)-109  -110	
	8	Bolt Pilot Repair Kit (Includes Items 18-22)			018.000	
18	1	Pilot Sleeve Assembly (include item 19)			002.000	
19	6	O-ring		560.1	01.358	
20	1 1	Retaining Ring			37.080	
21 22	8	Pilot Spool Assembly (Includes item 22) O-ring			002.000 23.358	
23	1	Muffler		530.0	33.000	
		Diaph	ragm Assembly / Elast	tomers		
Item #	Qty.	Description	Veres I		lumber	Domo
24	1	Main Shaft	versa-r	Rugged	Versa- -103	Dome
25	2	Diaphragm (See Below Material Chart)	V22	24xx	V22	5xx
26	2	O-ring		21D		/A
27 28	2	Inner Diaphragm Plate Bumper Washer	V22	21B	V22 501	26B
29	2	Outer Diaphragm Plate	VR		I VB:	226
30	4	Valve Seat (See Below Material Chart)	V.D.		40xx	
31	4	Valve Seat O-Ring (See Below Material Chart)			Note 2)	
32	4	Valve Ball (See Below Material Chart)	Wet End Assembly	V24	11xx	
Item #	Qty.	Description	Wet End Assembly	Part N	lumber	
33	2	Water Chamber		V23	B5FB	
34	16	Water Chamber Bolt			20.330	
		Discharge Manifold Discharge Manifold (BSP Option)			B6FB FBBSP	
٥٦	,	Discharge Drop in Manifold		518.V	006.156	
35	1	Discharge Drop in Manifold (BSP)		518.V0	06.156 E	
		WD Discharge Drop in Manifold		518.V00	06.156 W	
	-	WD Discharge Drop in Manifold (BSP) Suction Manifold			6.156 WE 37FB	
20	,	Suction Manifold (BSP Option)		V237	FBBSP	
36	1	Suction Drop in Manifold		518.V0	07.156	
^7	10	Suction Drop in Manifold (BSP)		518.V0	07.156 E	
37 38	12 28	Manifold Bolt Nut	V251D V354C			
39	28	Washer		V30	02GA	
		Elasto	omer Material Specific	ations		
Mate	erial	Versa-Rugged Diaphragm P/N	Versa-Dome Diaphragm P/N	"Ball P/N"	Seat P/N	Seat O-Ring
Neop	rene	V224N	V225N	V241N	V240N	N/A
Nit	rile	V224BN	V225BN	V241BN	V240BN	N/A
FK EPI	M	V224VT V224ND	V225VT V225ND	V241VT V241ND	V240VT V240ND	N/A N/A
PTI	JIVI FF	VZZ4ND N/A	N/A	V241ND V241TF	V240ND V240TF	V240T
Santo	prene	V224TPEXL	V225TPEXL	V241TPEXL	V240TPEXL	N/A
Hyt		V224TPEFG	V225TPEFG V241TPEFG V240TPEFG N/A			
I	inum	N/A	N/A	N/A	V240A (See Note 1 Below)	N/A
Alumi	IIIuIII			,,, .		

1.) The metallic seat material is to match the water chamber material. In addition to this seat, (4) o-rings are needed. (Ref Note 2) 2.) These (4) o-rings are only used with metallic fitted seats.



# **Composite Repair Parts Drawing - PTFE Fitted**

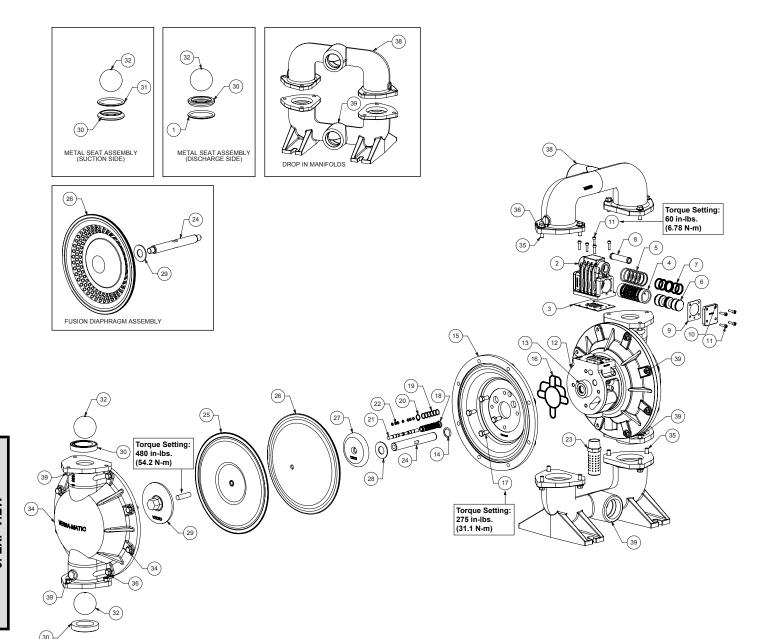



# **Composite Repair Parts List - PTFE Fitted**

New   Part Number   Air Suda Repair (I) (Polludes lems   Air Suda Repair (I) (Polludes   Air Suda Repair (I) (Pollud						
Arr Side Repear Kit (Includes Items   476 V027.000   3	Itom #	044	Description	Air Valve Assembly	ımbor	
1	item#	Qty.				
1			3.5.7.9.14.16.18-22)	476.V02	27.000	
3	1	1	Valve Body (includes items 2-11)			
1				095.V00	01.156	
Section   Color   Co	-	1				
6 1 Valve Spood Assembly (Includes terms 7) 775 V001 000 P34-204F Read Assembly P34-204F P34-204F P34-204F P34-204F P34-204F P34-204F P34-204F P34-205 P34-205 P34-210 P34-310		1		/55.V0(	<u>J6.148</u>	
7		1		500.20 775.V/0/	0.30U 11.000	
8 1 Air Valve Screen P24-210 9 2 2 End Cap Gasket P24-205 10 2 End Cap Gasket P24-205 11 13 3 Mounting Screws (8 included on item 1) 11 13 Mounting Screws (8 included on item 1) 12 1 Center Block Assembly (includes item 13.8 14) 12 1 Center Block Assembly (includes item 13.8 14) 13 2 Espanna Sieve P24-400C ASY 14 2 Main Shaft O-Ring P24-400 ASY 14 2 Main Shaft O-Ring P24-403 15 2 Air Chamber 1950-V91-103 16 2 Air Chamber 1950-V91-103 17 8 Bott P24-101 18 1 Pilot Repair of Includes item 18.22) 19 6 P24-102 19 1 Pilot Repair of Includes item 18.22) 20 1 P24-101 21 1 Pilot Special Assembly (includes item 19.8 14) 22 1 P24-103 23 1 Multier  10	7	6	Clyde Ping Assembly			
9   2   End Cap Gasket   P24-205   Find Cap   P34-300   Find Cap   P34-400   Find Cap   P34-400   Find Cap   P34-400   Find Cap	8					
10				P24-21U		
11						
	11	13				
13   2   Center Block Assembly (Includes item 13 & 14)				enter Section Assembly		
13   2		Qty.				
14		1				
15						
16						
17						
Pilot Repair kit (Includes Items 18-22)						
18				476.V0°	18.000	
The staining Ring	18		Pilot Sleeve Assembly (include item 19)			
Pilot Spool Assembly (Includes item 22)						
Teach			Retaining Ring			
Table						
Item #   Qty   Description	22		U-ring Mufflor			
Name	23		Mullel	ragm Assembly / Flastomers	3.000	
Main Shaft	. "		·	Part Ni	ımher	
25   2		Qty.	Description	PTFE Two Piece	Fusion	
26   2	24					
27	25			V221F		
28   2						
29   2   Bumper Washer   P24-501     30   2   Outer Diaphragm Plate   V221TO   N/A   N/A	20			I V//41FB I		
30   2	20	2			NI/A I	
31   4   Valve Seat (See Material Chart Below)   V240xx     32   4   Valve Seat O-Ring   V240T (See Note 1)     33   4   Valve Ball   V241TF	ı Ju		Inner Diaphragm Plate	V221TI		
Valve Seat O-Ring	30	2	Inner Diaphragm Plate Bumper Washer	V221TI P24-	501	
Valve Ball   Valve Basembly	30	2	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate	V221TI P24- V221TO	501 N/A	
Teach   City	30 31	2 2 4	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below)	V221TI P24- V221TO V241	501 N/A 0xx	
34   2   Water Chamber   V235FB	30 31 32	2 2 4 4	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring	V221TI P24- V221TO V240T (Se	501 N/A 0xx e Note 1)	
35   16   Water Chamber Bolt   170.020.330	30 31 32 33	2 2 4 4 4	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball	V221TI P24- V221TO V240T (Se V24' Wet End Assembly	501 N/A 0xx e Note 1)	
1	30 31 32 33 Item #	2 2 4 4 4 Qty.	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description	V221TI	501 N/A  0xx e Note 1) 1TF	
1	30 31 32 33 <b>Item #</b>	2 2 4 4 4 4 Qty.	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber	V221TI P24- V221TO V240T (Se V240T (Se V247  Wet End Assembly Part Nu V235	501 N/A  0xx e Note 1) 1TF  umber 5FB	
1	30 31 32 33 <b>Item #</b>	2 2 4 4 4 4 Qty.	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt	V221TI	501 N/A  0xx e Note 1) 1TF  Imber 5FB 0.330	
Discharge Drop in Manifold (BSP)   518.V006.156 E	30 31 32 33 <b>Item #</b>	2 2 4 4 4 4 Qty.	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold	V221TI	501 N/A  0xx e Note 1) ITF  umber  5FB 0.330 5FB	
WD Discharge Drop in Manifold   518.V006.156 W   WD Discharge Drop in Manifold (BSP)   518.V006.156 E	30 31 32 33 <b>Item #</b> 34 35	2 2 4 4 4 4 <b>Qty.</b> 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold (BSP Option)	V221TI	501 N/A  0xx e Note 1) ITF  umber  5FB 0.330 SFB BBSP	
Suction Manifold   V237FB	30 31 32 33 <b>Item #</b> 34 35	2 2 4 4 4 4 <b>Qty.</b> 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold	V221TI P24- V221TO V24( V221TO V24( V240T (Se V24'  Wet End Assembly  Part Nu V236  V236F  518.V00 518.V00	501  N/A  0xx e Note 1) ITF  Imber  5FB 0.330 5FB BBSP 06.156 6.156 E	
Suction Manifold (BSP Option)   V237FBBSP	30 31 32 33 <b>Item #</b> 34 35	2 2 4 4 4 4 <b>Qty.</b> 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold (BSP Option) Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold	V221TI P24- V221TO V240T (Se V240T (Se V240T (Se) V240T	501  N/A  0xx e Note 1) ITF  simber  6FB 0.330 6FB BBSP 06.156 6.156 E 6.156 W	
Suction Drop in Manifold   518.V007.156	30 31 32 33 <b>Item #</b> 34 35	2 2 4 4 4 4 <b>Qty.</b> 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold	V221TI	501  N/A  0xx e Note 1) ITF  Imber  5FB 0.330 6FB BBSP 06.156 6.156 E 5.156 W 6.156 E	
Suction Drop in Manifold   S18.V007.156	30 31 32 33 <b>Item #</b> 34 35	2 2 4 4 4 4 <b>Qty.</b> 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold	V221TI	501  N/A  0xx e Note 1) ITF  Imber  5FB 0.330 6FB BBSP 06.156 6.156 E 5.156 W 6.156 E	
38       12       Manifold Bolt       V251D         39       28       Nut       V354C         40       28       Washer       V302GA         Material Specifications         Material       Seat P/N         Aluminum       V240A (See Note 2 Below)	30 31 32 33 <b>Item #</b> 34 35	2 2 4 4 4 4 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold Suction Manifold	V221TI	501  N/A  0xx e Note 1)  ITF  Imber  SFB 0.330 SFB BBSP 16.156 6.156 E 6.156 E 6.156 W 6.156 E  ITF  ITF  ITF  ITF  ITF  ITF  ITF  IT	
39         28         Nut         V354C           40         28         Washer         V302GA           Material Specifications           Material         Seat P/N           Aluminum         V240A (See Note 2 Below)	30 31 32 33 <b>Item #</b> 34 35	2 2 4 4 4 4 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold Suction Manifold WD Discharge Drop in Manifold Suction Manifold Suction Manifold	V221TI	501  N/A  0xx e Note 1)  ITF  Imber  SFB 0.330  SFB BBSP 06.156 5.156 E 5.156 W 6.156 E 7FB BBSP 07.156	
40     28     Washer     V302GA       Material Specifications       Material     Seat P/N       Aluminum     V240A (See Note 2 Below)	30 31 32 33 <b>Item #</b> 34 35 36	2 2 4 4 4 4 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold Suction Manifold Suction Manifold (BSP) Suction Manifold Suction Drop in Manifold Suction Drop in Manifold	V221TI	501  N/A  Dxx e Note 1)  ITF  Imber  SFB 0.330  SFB BBSP 06.156 5.156 E 5.156 W 6.156 E 7FB BBSP D7.156 7.156 E	
Material Specifications  Material Specifications  Seat P/N  Aluminum V240A (See Note 2 Below)	30 31 32 33 <b>Item #</b> 34 35 36	2 2 4 4 4 4 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold Suction Manifold (BSP) WD Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Manifold (BSP) Suction Manifold (BSP) Suction Manifold (BSP) Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold	V221TI P24- V221TO V240T (Se V240T (Se V247  Wet End Assembly  Part Nt V236 170.02 V236 V236F 518.V006 518.V006 518.V006 518.V007 V237F 518.V006 518.V006 V237F 518.V006 518.V006 V237F 518.V007	501  N/A  0xx e Note 1)  ITF  Imber  SFB 0.330  SFB BBSP 06.156 6.156 E 5.156 W 6.156 E 7/FB BBSP 07.156 7.156 E	
Material         Seat P/N           Aluminum         V240A (See Note 2 Below)	30 31 32 33 <b>Item #</b> 34 35 36 37	2 2 4 4 4 4 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold Suction Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Manifold (BSP) Suction Manifold (BSP) Manifold Bolt Nut	V221TI P24- V221TO V24TO V24TO V24TO V24T (Se V24*  Wet End Assembly  Part Nt V236 170.02 V236 V236F 518.V000 518.V000 518.V000 V237 V237 V237 V237 V237 V237 V237 V237	501  N/A  0xx e Note 1)  ITF  Imber  5FB 0.330  5FB BBSP 06.156 6.156 E 5.156 W 6.156 E 7FB BBSP 07.156 E 77.156 77.156 1D	
Aluminum V240A (See Note 2 Below)	30 31 32 33 <b>Item #</b> 34 35 36 37	2 2 4 4 4 4 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold Discharge Drop in Manifold Suction Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Manifold (BSP) Suction Manifold (BSP) Manifold Bolt Nut	V221TI	501  N/A  0xx e Note 1)  ITF  Imber  5FB 0.330  FB BBSP 06.156 6.156 E 5.156 W 6.156 E 7FB BBSP 07.156 E 77.156 77.156 1D	
Stainless Steel SV240 (See Note 2 Relow)	30 31 32 33 <b>Item #</b> 34 35 36 37	2 2 4 4 4 4 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Manifold Suction Manifold (BSP Option) Suction Drop in Manifold (BSP) Manifold Bolt Nut Washer	V221TI	501  N/A  0xx e Note 1) ITF  Imber  5FB 0.330 05BB BBSP 06.156 6.156 E 5.156 W 6.156 E 7FB BBSP 07.156 E 7.156 E 1D 4C 2GA	
1 012 10 (000 1100 £ 501011)	30 31 32 33 <b>Item #</b> 34 35 36 37	2 2 4 4 4 4 2 16	Inner Diaphragm Plate Bumper Washer Outer Diaphragm Plate Valve Seat (See Material Chart Below) Valve Seat O-Ring Valve Ball  Description Water Chamber Water Chamber Bolt Discharge Manifold Discharge Manifold Discharge Drop in Manifold Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold WD Discharge Drop in Manifold Suction Manifold (BSP) Suction Manifold (BSP) Suction Manifold (BSP) Suction Manifold (BSP) Monifold Bolt Nut Washer  Material Aluminum	V221TI	501  N/A  0xx e Note 1)  ITF  Imber  SFB 0.330 SFB BBSP 06.156 6.156 E 6.156 W 6.156 E 7FB BBSP 07.156 E 10 4C 2GA  P/N  lote 2 Below)	

## Notes:

- 1.) These (4) o-rings are only used with metallic fitted seats.
- 2.) This metallic seat requires (4) V240T O-Rings.



# 5 - YEAR Limited Product Warranty

Versa-Matic warrants to the original end-use purchaser that no product sold by Versa-Matic that bears a Versa-Matic brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Versa-Matic's factory.

> ~ See versamatic.com/pdfs/VM Product Warranty.pdf for complete warranty, including terms and conditions, limitations and exclusions. ~

## **DECLARATION OF CONFORMIT**

DECLARATION DE CONFORMITE • DECLARACION DE CONFORMIDAD • ERKLÄRUNG BEZÜGLICH EINHALTUNG DER VORSCHRIFTEN DICHIARAZIONE DI CONFORMITÀ • CONFORMITEITSVERKLARING • DEKLARATION OM ÖVERENSSTÄMMELSE EF-OVERENSSTEMMELSESERKLÆRING • VAATIMUSTENMUKAISUUSVAKUUTUS • SAMSVARSERKLÄRING DECLARAÇÃO DE CONFORMIDADE

#### **MANUFACTURED BY:**

FABRIQUE PAR: FABRICADA POR: HERGESTELLT VON: FABBRICATO DA: VERVAARDIGD DOOR: TILLVERKAD AV: FABRIKANT: VALMISTAJA:

PRODUSENT: FABRICANTE:

## VERSA-MATIC®

Warren Rupp, Inc. A Unit of IDEX Corporation 800 North Main Street P.O. Box 1568 Mansfield, OH 44901-1568 USA

Tel: 419-526-7296 Fax: 419-526-7289



## PUMP MODEL SERIES: E SERIES, V SERIES, VT SERIES, VSMA3, SPA15, **RE SERIES AND U2 SERIES**

#### This product complies with the following European Community Directives:

Ce produit est conforme aux directives de la Communauté européenne suivantes: Este producto cumple con las siguientes Directrices de la Comunidad Europea: Dieses produkt erfüllt die folgenden Vorschriften der Europäischen Gemeinschaft: Questo prodotto è conforme alle seguenti direttive CEE: Dir produkt voldoet aan de volgende EG-richtlijnen:

Denna produkt överensstämmer med följande EU direktiv: Versa-Matic, Inc., erklærer herved som fabrikant, at ovennævnte produkt er i overensstemmelse med bestemmelserne i Direkktive:

Tämä tuote täyttää seuraavien EC Direktiivien vaatimukstet: Dette produkt oppfyller kravene til følgende EC Direktiver:

Este produto está de acordo com as seguintes Directivas comunitárias:

## This product has used the following harmonized standards to verify conformance:

Ce materiel est fabriqué selon les normes harmonisées suivantes, afin d'en garantir la conformité:

Este producto cumple con las siguientes directrices de la comunidad europa:

Dieses produkt ist nach folgenden harmonisierten standards gefertigtworden, die übereinstimmung wird bestätigt:

Questo prodotto ha utilizzato i seguenti standards per verificare la conformita':

De volgende geharmoniseerde normen werden gehanteerd om de conformiteit van dit produkt te garanderen:

För denna produkt har följande harmoniserande standarder använts för att bekräfta överensstämmelse:

Harmoniserede standarder, der er benyttet:

Tässä tuotteessa on sovellettu seuraavia yhdenmukaistettuja standardeja:

Dette produkt er produsert i overenstemmelse med fløgende harmoniserte standarder:

Este produto utilizou os seguintes padrões harmonizados para varificar conformidade:

## **AUTHORIZED/APPROVED BY:**

Approuve par: Aprobado por: Genehmigt von: approvato da: Goedgekeurd door: Underskrift: Valtuutettuna: Bemyndiget av: Autorizado Por:

06/14/2017 REV 08

Dave Roseberry Director of Engineering

Authorized Representative: **IDEX Pump Technologies** R79 Shannon Industrial Estate, Shannon, Co. Clare Ireland Attn: Barry McMahon

DATE: February 27, 2017

FECHA: DATUM: DATA: DATO: PÄIVÄYS:

2006/42/EC

EN809:1998+

A1:2009

to Annex VIII

on Machinery, according

VMOR 044FM

# **EC / EU DECLARATION OF CONFORMITY**

The objective of the declaration described is in conformity with the relevant Union harmonisation legislation:
Directive 94/9/EC (until April 19, 2016) and Directive 2014/34/EU (from April 20, 2016).

10 May 2014

Technical File No.:	203104000-1410/MER
Quality System Registration No:	ISO 9001-2000
Conforming Apparatus:	Air-Operated Metal Double Diaphragm Pumps for Use In Potentially Explosive Atmospheres
Hazardous Location Applied:	Elima-Matic metallic pumps
	1. I M2 c
	2. II 2G c T5
	3. II 2D c T100°C
	Elima-Matic non-metallic pumps
	4. II 2G c T6
	5. II 2D c T85°C
Manufacturer:	Warren Rupp, Inc., A Unit of IDEX Corporation 800 North Main Street, P.O. Box 1568 Mansfield, OH 44901-1568 USA.
On File With:	DEKRA Certification B.V. (0344) Meander 1051 6825 MJ Arnhem The Netherlands
Harmonized Standards Applied:	EN 13463-1:2009 Non-Electrical Equipment Potentially Explosive Atmospheres-Part 1 Basic Methods and Requirements EN 13463-5:2011 Non-Electrical Equipment for Potentially Explosive Atmospheres-Part 5

We hereby certify that the equipment described above conforms with the protection requirements of Council Directive 94/9/EC of 23 March 1994 Annex VIII on the approximation of the laws of the Member States Concerning Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres

DATE/OF REVISION/TITLE: 07 April 2016

Dave Roseberry
Director of Engineering

Protection by Constructional Safety

1. Elima-Matic Series metal pumps

2. Elima-Matic Series non-metallic pumps



Equipment:

Date of Issue:

