
3" Elima-Matic Bolted Aluminum - ATEX

with Metallic Center Section

E3 Metallic Pumps

Aluminum



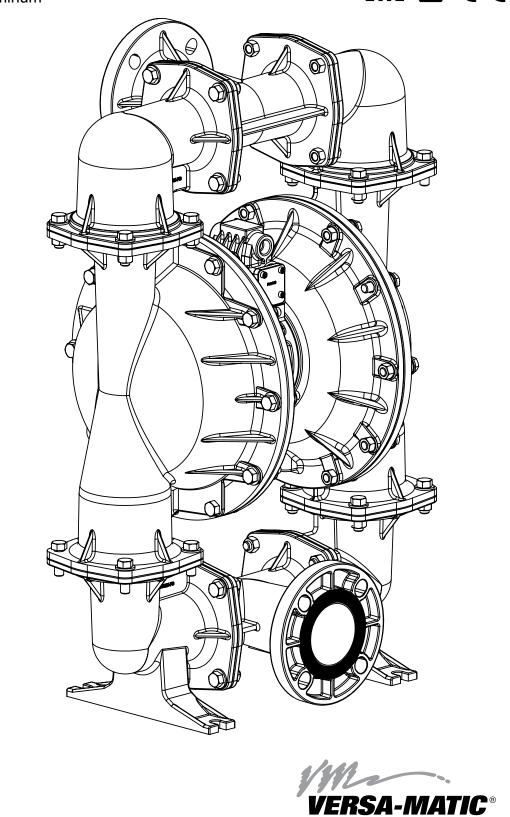



Safety Information

A IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

A CAUTION



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Nonmetallic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.



WARNING

Pump not designed, tested or certified to be powered by compressed natural gas. Powering the pump with natural gas will void the warranty.



WARNING

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

WARNING



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.




This pump is pressurized internally with air pressure during operation. Make certain that all fasteners are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

Grounding ATEX Pumps

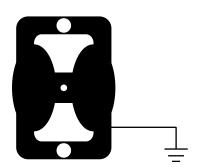

ATEX compliant pumps are suitable for use in explosive atmospheres when the equipment is properly grounded in accordance with local electrical codes. Pumps equipped with electrically conductive diaphragms are suitable for the transfer of conductive or non-conductive fluids of any explosion group. When operating pumps equipped with non-conductive diaphragms that exceed the maximum permissible projected area, as defined in EN 13463-1: 2009 section 6.7.5 table 9, the following protection methods must be applied:

- · Equipment is always used to transfer electrically conductive fluids or
- · Explosive environment is prevented from entering the internal portions of the pump, i.e. dry running

For further guidance on ATEX applications, please consult the factory.



Table of Contents

SECTION 1: PUMP SPECIFICATIONS	1
---------------------------------------	---

- Nomenclature
- Performance
- Materials
- Dimensional Drawings

SECTION 2: INSTALLATION & OPERATION.....6

- Principle of Pump Operation
- Typical Installation Guide
- Troubleshooting

SECTION 3: EXPLODED VIEW.....


- Composite Drawings
- Parts List
- Materials Code

SECTION 4: WARRANTY & CERTIFICATES13

- Warranty
- CE Declaration of Conformity Directive 2006/42/EC Machinery
 CE Declaration of Conformity- Directive 94/9/EC (ATEX)

Explanation of Pump Nomenclature

Your Serial #: (fill in from pump nameplate)

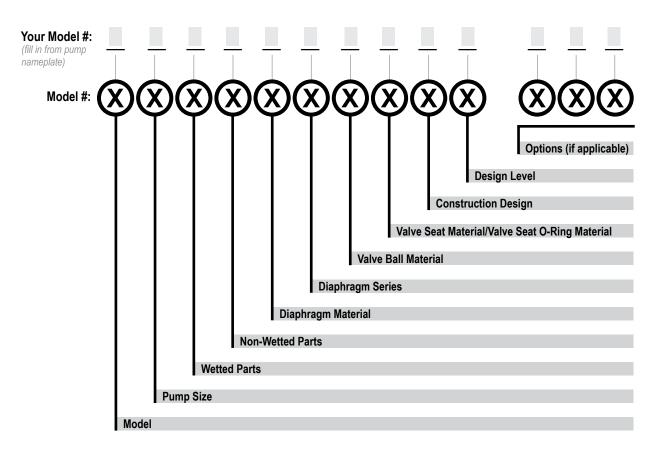

Model E Elima-Matic U Ultra-Matic V V-Series	Pump Size 6 1/4" 8 3/8" 5 1/2" 7 3/4" 1 1" 4 1-1/4" or 1-1/2" 2 2"	Wetted Parts A Aluminum C Cast Iron S Stainless Steel H Alloy C P Polypropylene K Kynar G Groundable Acetal	Non-Wetted Parts A Aluminum S Stainless Steel P Polypropylene G Groundable Acetal Z PTFE-coated Aluminum J Nickel-plated Aluminum C Cast Iron	Diaphragm Material 1 Neoprene 2 Nitrile (Nitrile) 3 FKM (Fluorocarbon) 4 EPDM 5 PTFE 6 Santoprene XL 7 Hytrel
	2 2 3 3"	B Aluminum (screen mount)	Q Epoxy-Coated Aluminum	Y FDA Santoprene

Diap	hragm	Series

R Rugged **D** Dome X Thermo-Matic

T Tef-Matic (2-piece) **B** Versa-Tuff (1-piece) F FUSION (one-piece integrated plate)

1 Neoprene 2 Nitrile 4 EPDM **5** PTFE 6 Santoprene XL 7 Hytrel 8 Polyurethane

Y FDA Santoprene

3 (FKM) Fluorocarbon A Acetal S Stainless Steel

Valve Ball Material Valve Seat/Valve Seat O-Ring Material 1 Neoprene

2 Nitrile 3 (FKM) Fluorocarbon 4 EPDM 5 PTFE 6 Santoprene XL 7 Hytrel 8 Polyurethane

A Aluminum w/ PTFE O-Rings S Stainless Steel w/ PTFE O-Rings C Carbon Steel w/ PTFE O-Rings H Alloy C w/ PTFE O-Rings

T PTFE Encapsulated Silicone O-Rings Y FDA Santoprene

Miscellaneous Options

B BSP Tapered Thread **CP** Center Port **ATEX** ATEX Compliant FP Food Processing SP Sanitary Pump **HP** High Pressure **OE** Original Elima-Matic

F Flap Valve **HD** Horizontal Discharge

3A 3-A Certified **UL** UL Listed **OB** Oil Bottle



Construction Design

9 Bolted

C

0 Clamped

Design Level

^{*}More than one option may be specified for a particular pump model.

Materials

Material Profile:	Operating Temperatures:	
CAUTION! Operating temperature limitations are as follows:	Max.	Min.
Conductive Acetal: Tough, impact resistant, ductile. Good abrasion resistance and low friction surface. Generally inert, with good chemical resistance except for strong acids and oxidizing agents.	190°F 88°C	-20°F -29°C
EPDM: Shows very good water and chemical resistance. Has poor resistance to oils and solvents, but is fair in ketones and alcohols.	280°F 138°C	-40°F -40°C
FKM: (Fluorocarbon) Shows good resistance to a wide range of oils and sovents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F) will attack FKM.	350°F 177°C	-40°F -40°C
Hytrel®: Good on acids, bases, amines and glycols at room temperatures only.	220°F 104°C	-20°F -29°C
Neoprene: All purpose. Resistance to vegetable oils. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters and nitro hydrocarbons and chlorinated aromatic hydrocarbons.	200°F 93°C	-10°F -23°C
Nitrile: General purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated hydrocarbons and nitro hydrocarbons.	190°F 88°C	-10°F -23°C
Nylon: 6/6 High strength and toughness over a wide temperature range. Moderate to good resistance to fuels, oils and chemicals.	180°F 82°C	32°F 0°C

Polypropylene: A thermoplastic polymer. Moderate tensile and flex strength. Resists stong acids and alkali. Attacked by chlorine, fuming nitric acid and other strong oxidizing agents.	180°F 82°C	32°F 0°C
PVDF: (Polyvinylidene Fluoride) A durable fluoroplastic with excellent chemical resistance. Excellent for UV applications. High tensile strength and impact resistance.	250°F 121°C	0°F -18°C
Santoprene®: Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance.	275°F 135°C	-40°F -40°C
UHMW PE: A thermoplastic that is highly resistant to a broad range of chemicals. Exhibits outstanding abrasion and impact resistance, along with environmental stress-cracking resistance.	180°F 82°C	-35°F -37°C
Urethane: Shows good resistance to abrasives. Has poor resistance to most solvents and oils.	150°F 66°C	32°F 0°C
Virgin PTFE: (PFA/TFE) Chemically inert, virtually impervious. Very few chemicals are known to chemically react with PTFE; molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures.	220°F 104°C	-35°F -37°C

Maximum and Minimum Temperatures are the limits for which these materials can be operated. Temperatures coupled with pressure affect the longevity of diaphragm pump components. Maximum life should not be expected at the extreme limits of the temperature ranges.

Metals:

Alloy C: Equal to ASTM494 CW-12M-1 specification for nickel and nickel alloy.

Stainless Steel: Equal to or exceeding ASTM specification A743 CF-8M for corrosion resistant iron chromium, iron chromium nickel and nickel based alloy castings for general applications. Commonly referred to as 316 Stainless Steel in the pump industry.


For specific applications, always consult the Chemical Resistance Chart.



Performance

E3 3" Bolted Aluminum Rubber and TPE Fitted - Rugged


Flow Rate	
Adjustable to	0-273 gpm (1,033 lpm)
Port Size	
Suction 3" ANSI	150 lbs. Class (DIN80)
Discharge	3" ANSI 150 lbs. Class
Air Inlet	1/2" NPT
Air Exhaust	1" NPT
Suction Lift	
Dry	16' (4.9 m)
Wet	31' (9.4 m)
Max Solid Size (Dian	meter)
	5/8" (15.9 mm)
Max Noise Level	93 dB(A)
Shipping Weights	
Aluminum	146 lbs. (66.2 kg)

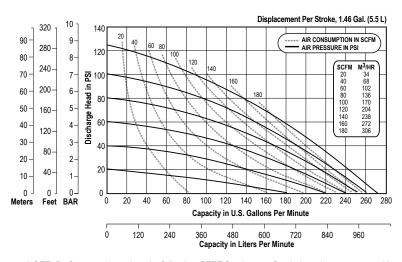

NOTE: Performance based on the following: PTFE fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

E3 3" Bolted Aluminum Rubber and TPE Fitted - Domed


Flow Rate
Adjustable to 0-252 gpm (954 lpm)
Port Size
Suction 3" ANSI 150 lbs. Class (DIN80)
Discharge 3" ANSI 150 lbs. Class
Air Inlet
Air Exhaust1" NPT
Suction Lift
Dry
Wet32' (9.8 m)
Max Solid Size (Diameter)
5/8" (15.9 mm)
Max Noise Level
Shipping Weights
Aluminum 146 lbs. (66.2 kg)

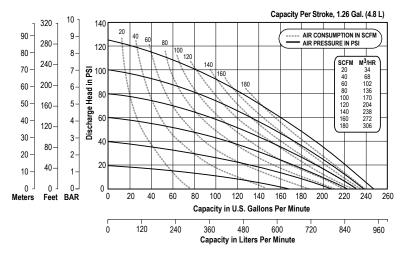

NOTE: Performance based on the following: PTFE fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

E3 3" Bolted Aluminum PTFE Fitted


Flow Rate
Adjustable to 0-186 gpm (704 lpm)
Port Size
Suction 3" ANSI 150 lbs. Class (DIN80)
Discharge 3" ANSI 150 lbs. Class
Air Inlet
Air Exhaust 1" NPT
Suction Lift
Dry
Wet31' (9.8 m)
Max Solid Size (Diameter)
5/8" (15.9 mm)
Max Noise Level
Shipping Weights
Aluminum 146 lbs. (66.2 kg)

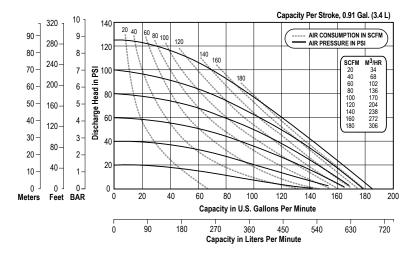


NOTE: Performance based on the following: PTFE fitted pump, flooded suction, water at ambient conditions. The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

Dimensional Drawings

E3 Aluminum Bolted - ANSI FlangeDimensions in inches (metric dimensions in brackets). Dimensional Tolerance .125" (3mm).

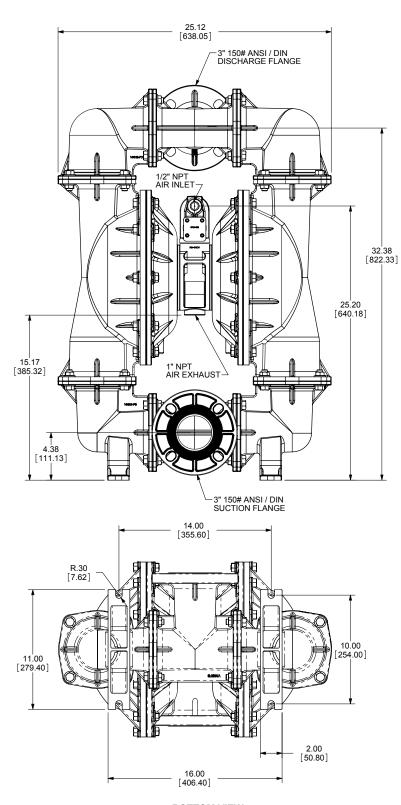

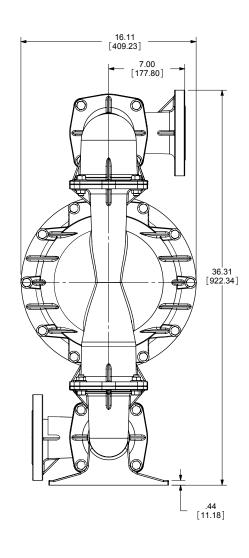







Dimensional Drawings


E3 Aluminum Bolted - NPT / BSP

Dimensionally Interchangeable with Versa-Matic and Wilden Clamped Pumps

Dimensions in inches (metric dimensions in brackets). Dimensional Tolerance .125" (3mm).

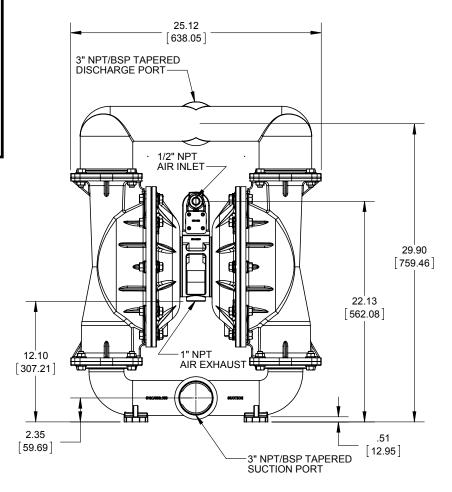


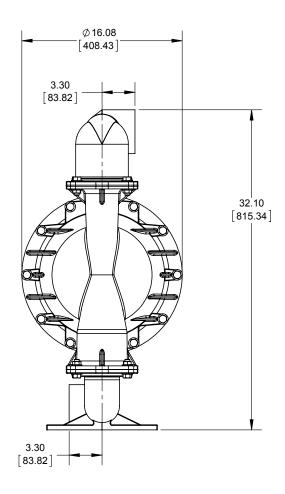

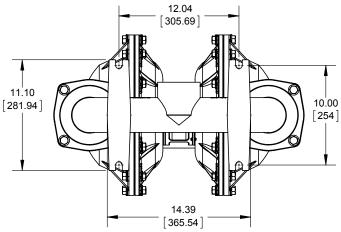



Principle of Pump Operation

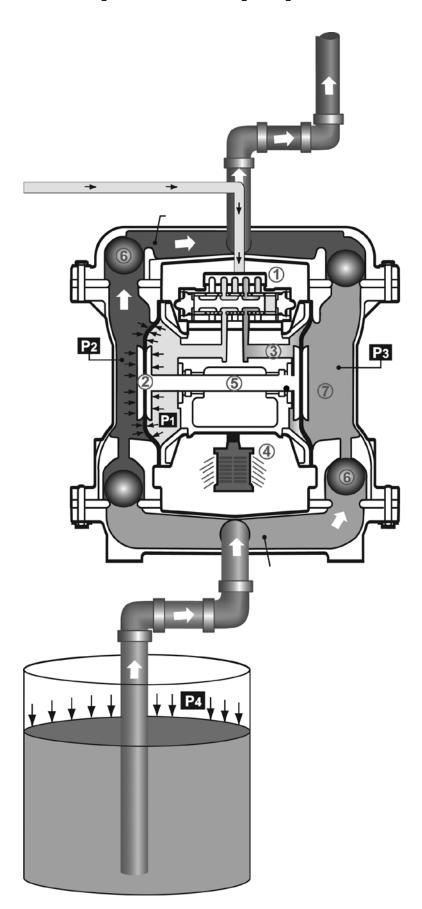

Air-Operated Double Diaphragm (AODD) pumps are powered by compressed air or nitrogen.


The main directional (air) control valve ① distributes compressed air to an air chamber, exerting uniform pressure over the inner surface of the diaphragm ②. At the same time, the exhausting air ③ from behind the opposite diaphragm is directed through the air valve assembly(s) to an exhaust port ④.

As inner chamber pressure **(P1)** exceeds liquid chamber pressure **(P2)**, the rod **⑤** connected diaphragms shift together creating discharge on one side and suction on the opposite side. The discharged and primed liquid's directions are controlled by the check valves (ball or flap)**⑥** orientation.

The pump primes as a result of the suction stroke. The suction stroke lowers the chamber pressure **(P3)** increasing the chamber volume. This results in a pressure differential necessary for atmospheric pressure **(P4)** to push the fluid through the suction piping and across the suction side check valve and into the outer fluid chamber T.

Suction (side) stroking also initiates the reciprocating (shifting, stroking or cycling) action of the pump. The suction diaphragm's movement is mechanically pulled through its stroke. The diaphragm's inner plate makes contact with an actuator plunger aligned to shift the pilot signaling valve. Once actuated, the pilot valve sends a pressure signal to the opposite end of the main directional air valve, redirecting the compressed air to the opposite inner chamber.


SUBMERGED ILLUSTRATION

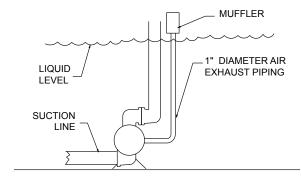

Pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills.



Recommended Installation Guide

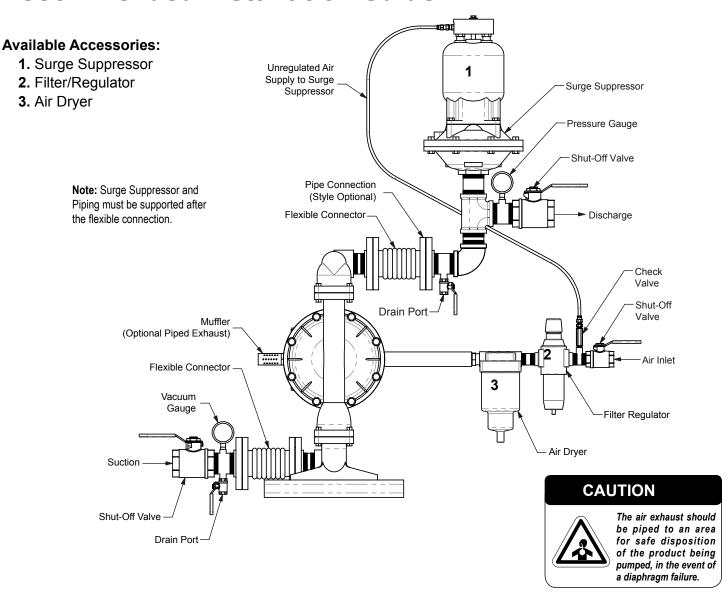

Installation And Start-Up

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

Air Supply

Connect the pump air inlet to an air supply with sufficient capacity and pressure to achieve desired performance. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

Air Valve Lubrication

The air distribution system is designed to operate WITHOUT lubrication. This is the standard mode of operation. If lubrication is designed, install an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes. Consult the Performance Curve to determine air consumption.

Air Line Moisture

Water in the compressed air supply may cause icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer.

Air Inlet And Priming

To start the pump, slightly open the air shut-off valve. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.




Troubleshooting Guide

Symptom:	Potential Cause(s):	Recommendation(s):
Pump Cycles Once	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Air valve or intermediate gaskets installed incorrectly.	Install gaskets with holes properly aligned.
	Bent or missing actuator plunger.	Remove pilot valve and inspect actuator plungers.
Pump Will Not Operate	Pump is over lubricated.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
/ Cycle	Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. cfm required).
•	Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.
	Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.
Pump Cycles and Will	Cavitation on suction side.	Check suction condition (move pump closer to product).
Not Prime or No Flow	Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.
	Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.
	Valve ball(s)/seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Pump Cycles Running	Over lubrication.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
Sluggish/Stalling,	Icing.	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.
Flow Unsatisfactory	Clogged manifolds.	Clean manifolds to allow proper air flow
Tion Choulondictory	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Cavitation on suction side.	Check suction (move pump closer to product).
	Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.
	Undersized suction line.	Meet or exceed pump connections.
	Restrictive or undersized air line.	Install a larger air line and connection.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous.
Product Leaking	Diaphragm failure, or diaphragm plates loose.	Replace diaphragms, check for damage and ensure diaphragm plates are tight.
Through Exhaust	Diaphragm stretched around center hole or bolt holes.	Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
Premature Diaphragm	Cavitation.	Enlarge pipe diameter on suction side of pump.
Failure	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.
	Misapplication (chemical/physical incompatibility).	Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
	Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.
Unbalanced Cycling	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Undersized suction line.	Meet or exceed pump connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs.


For additional troubleshooting tips contact After Sales Support at service.warrenrupp@idexcorp.com or 419-524-8388





Composite Repair Parts Drawing - Elastomeric and TPE Fitted

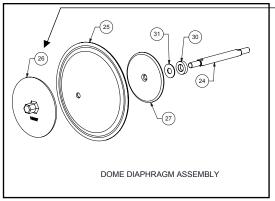

Torque Setting: 720 in-lbs. (81 N-m) 960 in-lbs (XL) (180 N-m) (XL)

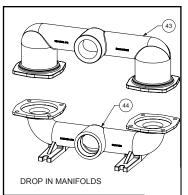

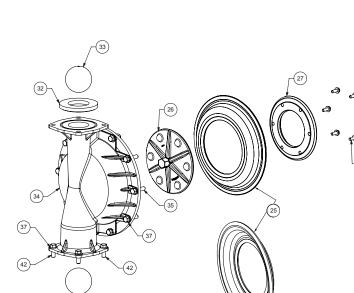

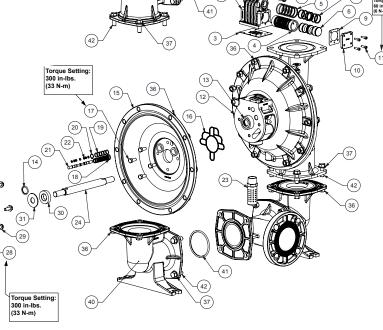




Optional orientation: To ease assembly of the TPE diaphragms, one of the diaphragms may be reversed. **Composite Repair Parts List - Elastomeric and TPE Fitted**

<u> Jon</u>						
Item #	Qty.	Description	Air Valve Assembly	Part N	umber	
itom #	Q.r.y.	Air Side Repair Kit (Includes Items		476.02		
		3,5,7,9,14,16,18-22)				
1	1	Valve Body (includes items 2-11)		031.V0		
2	1 1	Valve Body		095.V0		
3 4	1	Valve Body Gasket		P24-		
5	6	Valve Sleeve O-ring		755.V0 560.20		1
6	1	Valve Spool Assembly (Includes items 7)		775.V0		
7	6	Glyde Ring Assembly		P34-		
8	1	Air Valve Screen		P24-		
9	2	End Cap Gasket		P24-		
10	2	End Cap		P34-		
11	13	Mounting Screws (8 included on item 1)		S10	001	
			enter Section Assemb			
tem #	Qty.	Description		Part N		
12	1	Center Block Assembly (Includes item 13&14)		P34-400		
13	2	Bearing Sleeve		P34-		
14 15	2	Main Shaft O-Ring		P34-		
16	2	Air Chamber Air Chamber Gasket		196.V0 P79		
17	8	Bolt			-109 -110	
17		Pilot Repair Kit (Includes Items 18-22)		476.02		
18	1	Pilot Sleeve Assembly (include item 19)		755.V0		
19	6	O-ring		560.10		
20	1	Retaining Ring		675.03		
21	1	Pilot Spool Assembly (Includes item 22)		775.V0		
22	8	O-ring		560.02		
23	1	Muffler		530.03	33.000	
		Diaphi	agm Assembly / Elast	omers Part N	umbor	
tem#	Qty.	Description	Versa-F			-Dome
24	1	Main Shaft		P34-		
25	2	Diaphragm (See Below Material Chart)	V30)6xx
26	2	Outer Diaphragm Plate	V302			307
27	2	Inner Diaphragm Plate	V302			07B
28	12	Bolt	V30			/A
29	12	Washer	V302			/A
30	2	Bumper Washer		P34-		
31 32	<u>2</u>	Back-Up Washer		V30 V45		
22		Valve Seat (See Below Material Chart)				
33	4	Valve Ball (See Below Material Chart) Valve Ball (See Below Material Chart)	Wet Fnd Assembly		5xx	
	4	Valve Ball (See Below Material Chart)	Wet End Assembly	V45	5xx	
tem # 34	4 Qty. 2		Wet End Assembly		5xx umber	
34 35	4 Qty. 2 20	Valve Ball (See Below Material Chart) Description	Wet End Assembly	V45 Part N	5xx umber 0FB	
34 35 36	4 Qty. 2 20 52	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut	Wet End Assembly	V45 Part N	5xx umber 0FB 55.330	
34 35 36 37	4 Qty. 2 20 52 52	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer	Wet End Assembly	V45 Part N	5xx umber 0FB 55.330 87C 87B	
34 35 36 37 38	4 Qty. 2 20 52 52 2	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee	Wet End Assembly	V45 Part N	5xx umber 0FB 55.330 87C 87B 8FB	
34 35 36 37 38 39	4 Qty. 2 20 52 52 2 2	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow	Wet End Assembly	V45 Part N	5xx umber 0FB 55.330 87C 87B 8FB E-FB	
34 35 36 37 38 39 40	4 Qty. 2 20 52 52 52 2 2	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow	Wet End Assembly	V45 Part N	5xx umber 0FB 55.330 87C 87B 8FB E-FB	
34 35 36 37 38 39 40	4 Qty. 2 20 52 52 2 2 2 4	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring	Wet End Assembly	V45 Part N V35 170.05 V38 V38 V35 V351 V352 V25	5xx umber 0FB 55.330 87C 87B 8FB E-FB E-FB 8xx	
34 35 36 37 38 39 40 41 42	4 Qty. 2 20 52 52 52 2 2	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt	Wet End Assembly	V45 Part N V35 170.05 V38 V38 V35 V351 V352 V25 V35	5xx umber 0FB 55.330 87C 87B 8FB E-FB E-FB 8xx 87D	
34 35 36 37 38 39 40	4 Qty. 2 20 52 52 2 2 2 4	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold	Wet End Assembly	V45 Part N V35 170.05 V38 V38 V35 V351 V352 V25 V38 518.V0	5xx umber 0FB 55.330 87C 87B 8FB E-FB E-FB 8xx 87D 02.156	
em # 34 35 36 37 38 39 40 41 42 43	4 Qty. 2 20 52 52 2 2 2 4	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold (BSP)	Wet End Assembly	V45 Part N V35 170.05 V38 V38 V35 V351 V352 V25 V38 518.V00	5xx umber 0FB 55.330 87C 87B 8FB E-FB E-FB 8xx 87D 02.156 2.156 E	
tem # 34 35 36 37 38 39 40 41 42	4 Qty. 2 20 52 52 2 2 2 4	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold	Wet End Assembly	V45 Part N V35 170.05 V38 V38 V35 V351 V352 V25 V38 518.V00 518.V00	5xx umber 0FB 55.330 87C 87B 8FB E-FB E-FB 8xx 87D 02.156 2.156 E 03.156	
34 35 36 37 38 39 40 41 42 43	4 Qty. 2 20 52 52 2 2 2 4 32 1 1	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold	Wet End Assembly	V45 Part N V35 170.05 V38 V35 V351 V352 V351 V352 V25 V38 518.V00 518.V00 518.V00	5xx umber 0FB 55.330 87C 87B 8FB E-FB E-FB 8xx 87D 02.156 2.156 E 03.156	
34 35 36 37 38 39 40 41 42 43	4 Qty. 2 20 52 52 2 2 4 32 1 1 1	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold (BSP)	omer Material Specific Versa-Dome	V45 Part N V35 170.05 V38 V35 V351 V352 V25 V35 518.V00 518.V00 518.V00 ations	5xx umber 0FB 55.330 67C 67B 88FB E-FB E-FB 8xx 87D 02.156 2.156 E 03.156 3.156 E	"Manifold Tee
sem # 34 35 36 37 38 39 40 41 42 43 44	4 Qty. 2 20 52 52 2 2 4 32 1 1 1 1 terial	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Flasto Versa-Rugged Diaphragm P/N	omer Material Specific Versa-Dome Diaphragm P/N	V45 Part N V35 170.05 V38 V35 V351 V352 V25 V38 518.V00 518.V00 ations "Ball P/N"	5xx umber 0FB 55.330 7C 7B 8FB E-FB 8-FB 6-FB 2.156 2.156 E 03.156 3.156 E	O-ring P/N"
tem # 34 35 36 37 38 39 40 41 42 43 44 Mat	4 Qty. 2 20 52 52 2 2 4 32 1 1 1 1 terial	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold (BSP) Elasto Versa-Rugged Diaphragm P/N V305N	omer Material Specific Versa-Dome Diaphragm P/N V306N	V45 Part N V35 170.05 V38 V35 V351 V352 V25 V38 518.V00 518.V00 518.V00 ations "Ball P/N"	5xx umber 0FB 55.330 7C 7B 8FB E-FB 8-FB 67D 02.156 2.156 E 03.156 3.156 E Seat P/N V456N	O-ring P/N" N/A
tem # 34 35 36 37 38 39 40 41 42 43 44 Mat	4 Qty. 2 20 52 52 2 2 4 32 1 1 1 1 terial eprene itrile	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold (BSP) Elasto Versa-Rugged Diaphragm P/N V305N V305BN	omer Material Specific: Versa-Dome Diaphragm P/N V306N V306BN	V45 Part N V35 170.05 V38 V35 V351 V351 V352 V25 V38 518.V00 518.V00 518.V00 ations "Ball P/N" V455N V455BN	5xx umber 0FB 55.330 7C 7B 8FB E-FB 8-FB 6-FB 2.156 2.156 E 03.156 3.156 E Seat P/N V456N V456N	O-ring P/N" N/A V258BN
tem # 34 35 36 37 38 39 40 41 42 43 44 Mat	4 Qty. 2 20 52 52 2 2 4 32 1 1 1 1 terial eprene itrile KM	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold (BSP) Elasto Versa-Rugged Diaphragm P/N V305N V305BN V305VT	omer Material Specific: Versa-Dome Diaphragm P/N V306N V306BN V306VT	V45 Part N V35 170.05 V38 V35 V351 V351 V352 V25 V38 518.V00 518.V00 518.V00 **The companies of the companies o	5xx umber 0FB 55.330 87C 87B 8FB E-FB 8-FB 62.156 2.156 E 03.156 3.156 E Seat P/N V456N V456BN V456VT	O-ring P/N" N/A V258BN V258VT
tem # 34 35 36 37 38 39 40 41 42 43 44 Mat Neo Ni FI	4 Qty. 2 20 52 52 2 2 4 32 1 1 1 1 terial eprene itrile KM	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold (BSP) Elasto Versa-Rugged Diaphragm P/N V305N V305N V305ND	omer Material Specific: Versa-Dome Diaphragm P/N V306N V306BN V306VT V306ND	V45 Part N V35 170.05 V38 V35 V351 V351 V352 V25 V38 518.V00 518.V00 518.V00 **The companies of the companies o	5xx umber 0FB 55.330 7C 7B 8FB E-FB 8-FB 6-FB 2.156 2.156 E 03.156 3.156 E Seat P/N V456N V456N V456N V456ND	O-ring P/N" N/A V258BN V258VT V258ND
tem # 34 35 36 37 38 39 40 41 42 43 44 Mat Neo Ni FI	4 Qty. 2 20 52 52 2 2 4 32 1 1 1 1 terial eprene itrile KM	Valve Ball (See Below Material Chart) Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow O-Ring Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold (BSP) Elasto Versa-Rugged Diaphragm P/N V305N V305BN V305VT	omer Material Specific: Versa-Dome Diaphragm P/N V306N V306BN V306VT	V45 Part N V35 170.05 V38 V35 V351 V351 V352 V25 V38 518.V00 518.V00 518.V00 **The companies of the companies o	5xx umber 0FB 55.330 87C 87B 8FB E-FB 8-FB 62.156 2.156 E 03.156 3.156 E Seat P/N V456N V456BN V456VT	O-ring P/N" N/A V258BN V258VT



Composite Repair Parts Drawing - PTFE Fitted

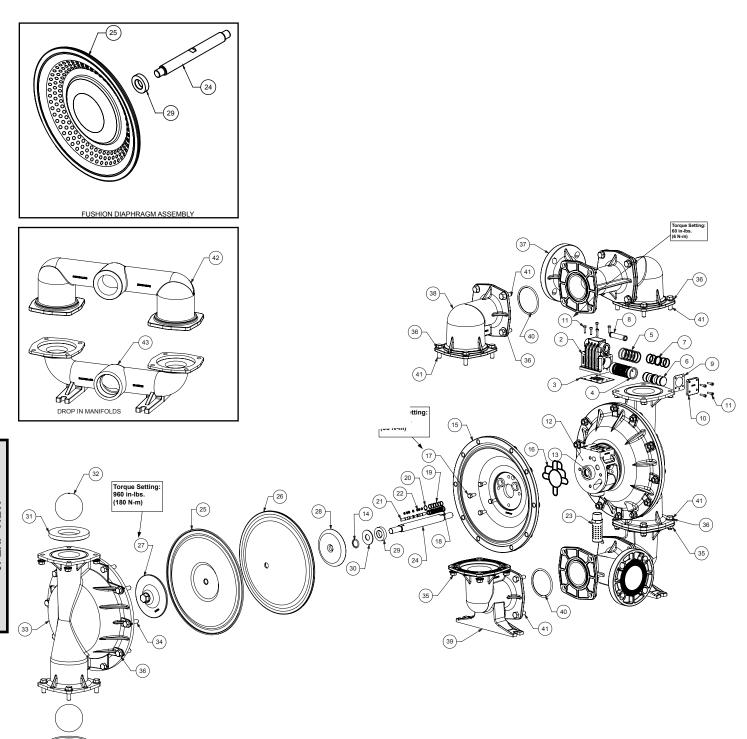



Composite Repair Parts List - PTFE Fitted

14 //	05	D	Air Valve Assembly	
Item #	Qty.	Description Air Side Penair Kit (Includes Items	Part N	
		Air Side Repair Kit (Includes Items 3,5,7,9,14,16,18-22)	476.02	29.000
1	1	Valve Body (includes items 2-11)	031.V0	03.156
2	1	Valve Body	095.V001.156	
3	1	Valve Body Gasket	P24-202	
4	1	Valve Sleeve	755.V005.148	
5	6	O-ring	560.20	
6	1	Valve Spool Assembly (Includes items 7)	775.V0	
7	6	Glyde Ring Assembly	P34-2	
8	1	Air Valve Screen	P24-	
9	2	End Cap Gasket	P24-	
10	2	End Cap	P34-	
11	13	Mounting Screws (8 included on item 1)	S10	001
Itana #	Ohr		Center Section Assembly Part No.	unah au
12	Qty. 1	Description Center Block Assembly (Includes item 13 & 14)	P34-400	
13	2	Bearing Sleeve	P34-400	
14	2	Main Shaft O-Ring	P34-	
15	2	Air Chamber	196.V0	
16	2	Air Chamber Gasket	P79-	
17	8	Bolt	P24-	
		Pilot Repair Kit (Includes Items 18-22)	476.02	
18	1	Pilot Sleeve Assembly (include item 19)	755.V0	
19	6	O-ring	560.10	01.358
20	1	Retaining Ring	675.03	
21	1	Pilot Spool Assembly (Includes item 22)	775.V0	
22	8	O-ring	560.02	
23	1	Muffler	530.03	33.000
		Dianh		
		Біаріі	ragm Assembly / Elastomers	unala a u
Item #	Qty.	Description	Part N	umber PTFF Fusion
		Description	Part No Piece	PTFE Fusion
24	1	Description Main Shaft	Part No PTFE Two Piece P34-103	PTFE Fusion P34-103F
24 25	1 2	Description Main Shaft Diaphragm	Part No PTFE Two Piece P34-103 V305TF-FB	PTFE Fusion P34-103F V305F
24 25 26	1 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB	PTFE Fusion P34-103F
24 25	1 2	Description Main Shaft Diaphragm	Part No PTFE Two Piece P34-103 V305TF-FB	PTFE Fusion P34-103F V305F
24 25 26 27 28 29	1 2 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO	PTFE Fusion P34-103F V305F N/A
24 25 26 27 28 29	1 2 2 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E	PTFE Fusion P34-103F V305F N/A
24 25 26 27 28 29 30 31	1 2 2 2 2 2 2 2 2 4	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart)	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45	PTFE Fusion P34-103F V305F N/A 501
24 25 26 27 28 29	1 2 2 2 2 2 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45	PTFE Fusion P34-103F V305F N/A 501
24 25 26 27 28 29 30 31 32	1 2 2 2 2 2 2 2 2 4 4	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45 Wet End Assembly	PTFE Fusion P34-103F V305F N/A -501 6xx
24 25 26 27 28 29 30 31 32	1 2 2 2 2 2 2 2 4 4	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF
24 25 26 27 28 29 30 31 32 Item #	1 2 2 2 2 2 2 2 2 4 4	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V356	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB
24 25 26 27 28 29 30 31 32 Item # 33	1 2 2 2 2 2 2 2 2 4 4 4	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Bolt	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V350 170.05	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330
24 25 26 27 28 29 30 31 32 Item # 33 34	1 2 2 2 2 2 2 2 2 4 4 4 Qty. 2 2 2 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Bolt Nut	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V356 170.05	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C
24 25 26 27 28 29 30 31 32 Item # 33 34 35	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 52	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Bolt Nut Washer	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V356 170.05 V38	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C 87B
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V356 170.05 V38 V356 V356 V356 V356 V356 V356 V356	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C 87B 8FB
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 52 52 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V356 170.05 V38 V356 V356 V356 V357	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 65.330 67C 87B 8FB E-FB
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V356 170.05 V38 V356 V356 V356 V356 V356 V356 V356	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C 87B 8FB E-FB E-FB
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V350 170.05 V38 V351 V351 V351	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C 87B 8FB E-FB E-FB E-FB
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38 39 40	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 52 52 2 2 2 4 4 4 3 2 5 2 2 2 2 2 2 2 3 2 3 2 3 2 3 2 2 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow Manifold Seal	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45 V45 Wet End Assembly Part No V350 170.05 V38 V350 V351 V351 V352 V258 V358 V358 V358 V359 V358 V358 V358 V358 V358 V358 V358 V358	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 65.330 67C 87B 8FB E-FB E-FB E-FB E-FB 0TFS 17D 02.156
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38 39 40	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 52 52 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow Manifold Seal Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold (BSP)	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V356 170.05 V38 V351 V351 V352 V258 V358 V358 V358 V359 V359 V358 V350 V351 V351 V352 V258 V358 V358 V358 V358 V358 V358 V358 V3	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 65.330 67C 87B 8FB E-FB E-FB E-FB E-FB 0TFS 17D 02.156 2.156 E
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38 39 40 41	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 52 52 2 2 2 4 4 4	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow Manifold Seal Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V350 170.05 V38 V351 V351 V352 V258 V358 V358 V358 V359 V359 V358 V351 V351 V352 V258 V358 V358 V358 V358 V358 V358 V358 V3	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C 87B 8FB E-FB E-FB E-FB E-FB 5TFS 17D 02.156 2.156 E 03.156
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38 39 40	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 52 52 2 2 2 4 4 4 3 2 5 2 2 2 2 2 2 2 3 2 3 2 3 2 3 2 2 2 2	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow Manifold Seal Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold	Part No PTFE Two Piece P34-103 V305TF-FB V305TFB V302TO V302TI P34- V302E V45: Wet End Assembly Part No V350 170.05 V38 V351 V351 V352 V258 V358 V358 V359 V359 V359 V351 V350 V351 V351 V352 V258 V358 V358 V358 V358 V358 V358 V358 V3	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C 87B 8FB E-FB E-FB E-FB E-FB 5TFS 17D 02.156 2.156 E 03.156
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38 39 40 41 42	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 52 52 2 2 4 32 1	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow Manifold Seal Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold	Part No PTFE Two Piece P34-103 V305TF-FB V302TO V302TI P34- V302E V45: V45: Wet End Assembly Part No V350 170.05 V38 V350 V351 V351 V352 V258 V358 V350 V350 V350 V350 V350 V350 V350 V351 V351 V352 V258 V358 V358 V358 V358 V358 V358 V358 V3	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C 87B 8FB E-FB E-FB E-FB 5-FB 5-FB 5-FB 5-FB 5-FB 5-FB 5-FB 5
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38 39 40 41 42 43	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 52 2 2 2 4 32 1	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow Manifold Seal Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold (BSP) Suction Drop in Manifold (BSP) Elast Seat P/N	Part No PTFE Two Piece P34-103 V305TF-FB V302TO V302TO V302TI P34- V302E V45: V45: Wet End Assembly Part No V350 170.05 V38 V350 V351 V351 V352 V352 V358 V358 V358 V358 V358 V358 V358 V358	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C 87B 8FB E-FB E-FB E-FB 51TFS 67D 02.156 2.156 E 03.156 3.156 E
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38 39 40 41 42 43	1 2 2 2 2 2 2 2 4 4 4 Qty. 2 20 52 52 2 2 2 4 32 1	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow Manifold Seal Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold	Part No PTFE Two Piece P34-103 V305TF-FB V302TO V302TI P34- V302E V45: V45: Wet End Assembly Part No V350 170.05 V38 V350 V351 V351 V352 V258 V358 V350 V350 V350 V350 V350 V350 V350 V351 V351 V352 V258 V358 V358 V358 V358 V358 V358 V358 V3	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF umber 0FB 55.330 67C 87B 8FB E-FB E-FB E-FB 51TFS 67D 02.156 2.156 E 03.156 3.156 E
24 25 26 27 28 29 30 31 32 Item # 33 34 35 36 37 38 39 40 41 42 43	1 2 2 2 2 2 2 2 4 4 4 4 Qty. 2 2 2 2 2 2 2 4 4 32 1 1 5 2 2 2 2 4 5 32 1 1 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	Description Main Shaft Diaphragm Back-Up Diaphragm Outer Diaphragm Plate Inner Diaphragm Plate Bumper Washer Back-Up Washer Valve Seat (See Below Material Chart) Valve Ball Description Water Chamber Water Chamber Water Chamber Bolt Nut Washer Manifold Tee Discharge Elbow Suction Elbow Manifold Seal Elbow Bolt Discharge Drop in Manifold Discharge Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold Suction Drop in Manifold (BSP) Suction Drop in Manifold (BSP) Elast Seat P/N	Part No PTFE Two Piece P34-103 V305TF-FB V302TO V302TO V302TI P34- V302E V45: V45: Wet End Assembly Part No V350 170.05 V38 V350 V351 V351 V352 V352 V358 V358 V358 V358 V358 V358 V358 V358	PTFE Fusion P34-103F V305F N/A 501 6xx 5TF wmber 0FB 55.330 FC FB 55.330 FC 7D 02.156 2.156 E 03.156 E 03.156 E t O-Ring P/N

Notes

- 1.) The outer diaphragm plate material is to match the water chamber material (cast iron uses SV302B or SVB307)
- 2.) In addition to the stainless valve setas, (8) orings are needed. (4) SV456TES-1 and (4) SV456TES-2



5 - YEAR Limited Product Warranty

Quality System ISO9001 Certified • Environmental Management Systems ISO14001 Certified

Versa-Matic warrants to the original end-use purchaser that no product sold by Versa-Matic that bears a Versa-Matic brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Versa-Matic's factory.

~ See complete warranty at http://www.versamatic.com/pdfs/VM%20Product%20Warranty.pdf ~

DECLARATION OF CONFORMIT

DECLARATION DE CONFORMITE • DECLARACION DE CONFORMIDAD • ERKLÄRUNG BEZÜGLICH EINHALTUNG DER VORSCHRIFTEN DICHIARAZIONE DI CONFORMITÀ • CONFORMITEITSVERKLARING • DEKLARATION OM ÖVERENSSTÄMMELSE EF-OVERENSSTEMMELSESERKLÆRING • VAATIMUSTENMUKAISUUSVAKUUTUS • SAMSVARSERKLÄRING DECLARAÇÃO DE CONFORMIDADE

MANUFACTURED BY:

FABRIQUE PAR: FABRICADA POR: HERGESTELLT VON: FABBRICATO DA: VERVAARDIGD DOOR: TILLVERKAD AV: FABRIKANT: VALMISTAJA: PRODUSENT:

FABRICANTE:

VERSA-MATIC®

Warren Rupp, Inc. A Unit of IDEX Corporation 800 North Main Street P.O. Box 1568 Mansfield, OH 44901-1568 USA

Tel: 419-526-7296 Fax: 419-526-7289



PUMP MODEL SERIES: E SERIES, V SERIES, VT SERIES, VSMA3, SPA15, **RE SERIES AND U2 SERIES**

This product complies with the following European Community Directives:

Ce produit est conforme aux directives de la Communauté européenne suivantes: Este producto cumple con las siguientes Directrices de la Comunidad Europea: Dieses produkt erfüllt die folgenden Vorschriften der Europäischen Gemeinschaft:

Questo prodotto è conforme alle seguenti direttive CEE: Dir produkt voldoet aan de volgende EG-richtlijnen:

Denna produkt överensstämmer med följande EU direktiv:

Versa-Matic, Inc., erklærer herved som fabrikant, at ovennævnte produkt er i overensstemmelse med bestemmelserne i Direkktive:

Tämä tuote täyttää seuraavien EC Direktiivien vaatimukstet:

Dette produkt oppfyller kravene til følgende EC Direktiver:

Este produto está de acordo com as seguintes Directivas comunitárias:

This product has used the following harmonized standards to verify conformance:

Ce materiel est fabriqué selon les normes harmonisées suivantes, afin d'en garantir la conformité:

Este producto cumple con las siguientes directrices de la comunidad europa:

Dieses produkt ist nach folgenden harmonisierten standards gefertigtworden, die übereinstimmung wird bestätigt:

Questo prodotto ha utilizzato i seguenti standards per verificare la conformita':

De volgende geharmoniseerde normen werden gehanteerd om de conformiteit van dit produkt te garanderen:

För denna produkt har följande harmoniserande standarder använts för att bekräfta överensstämmelse:

Harmoniserede standarder, der er benyttet:

Tässä tuotteessa on sovellettu seuraavia yhdenmukaistettuja standardeja:

Dette produkt er produsert i overenstemmelse med fløgende harmoniserte standarder:

Este produto utilizou os seguintes padrões harmonizados para varificar conformidade:

AUTHORIZED/APPROVED BY:

Approuve par: Aprobado por: Genehmigt von: approvato da: Goedgekeurd door: Underskrift: Valtuutettuna: Bemyndiget av: Autorizado Por:

Dave Roseberry Director of Engineering

Authorized Representative: **IDEX Pump Technologies** R79 Shannon Industrial Estate, Shannon, Co. Clare Ireland Attn: Barry McMahon

06/14/2017 REV 08

DATE: February 27, 2017

FECHA: DATUM: DATA: DATO: PÄIVÄYS:

2006/42/EC

EN809:1998+

A1:2009

to Annex VIII

on Machinery, according

VMOR 044FM

EC / EU DECLARATION OF CONFORMITY

The objective of the declaration described is in conformity with the relevant Union harmonisation legislation: Directive 94/9/EC (until April 19, 2016) and Directive 2014/34/EU (from April 20, 2016).

10 May 2014

Technical File No.:	203104000-1410/MER
Quality System Registration No:	ISO 9001-2000
Conforming Apparatus:	Air-Operated Metal Double Diaphragm Pumps for Use In Potentially Explosive Atmospheres
Hazardous Location Applied:	Elima-Matic metallic pumps
	1. I M2 c
	2. II 2G c T5
	3. II 2D c T100°C
	Elima-Matic non-metallic pumps
	4. II 2G c T6
	5. II 2D c T85°C
Manufacturer:	Warren Rupp, Inc., A Unit of IDEX Corporation 800 North Main Street, P.O. Box 1568 Mansfield, OH 44901-1568 USA.
On File With:	DEKRA Certification B.V. (0344) Meander 1051 6825 MJ Arnhem The Netherlands
Harmonized Standards Applied:	EN 13463-1:2009 Non-Electrical Equipment Potentially Explosive Atmospheres-Part 1 Basic Methods and Requirements EN 13463-5:2011 Non-Electrical Equipment for Potentially Explosive Atmospheres-Part 5

We hereby certify that the equipment described above conforms with the protection requirements of Council Directive 94/9/EC of 23 March 1994 Annex VIII on the approximation of the laws of the Member States Concerning Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres

DATE/OF REVISION/TITLE: 07 April 2016

Dave Roseberry
Director of Engineering

Protection by Constructional Safety

1. Elima-Matic Series metal pumps

2. Elima-Matic Series non-metallic pumps



Equipment:

Date of Issue:

